

## 500 Series Disc Brake Rocker Arm Adjustment

1. Loosen the hex nut on the disc brake rocker arm (Fig. 1)



2. Then adjust the inner Allen nut using the Allen wrench contained in the tool kit in a clockwise direction. (Fig. 2)



3. Push the arm inward, reducing the inner/outer distance, then tighten the Allen nut. (Fig. 3)



4. Tighten the outer hex nut. (Fig. 4)



Loop the loose end of the brake cable as shown above when finished.